7” Capacitive Multi-Touch Tablet

Instruction Manual

HKC brings you the latest in Android™ technology, giving you the performance you want at an affordable price. The crystal clear 7” capacitive touch screen is great for watching movies, reading books, surfing the web, video conferencing online and more. With Google Play you can take advantage of more than 600,000 apps and games, as well as the world's largest collection of eBooks, millions of songs, thousands of movies, TV shows and magazines. Designed to enhance your entertainment experience at home or on the go and with up to 9 colors to choose from, you can enjoy your technology in style! Welcome to HKC…

Technical Specifications:

- Android 4.0 OS (Ice Cream Sandwich)
- 7” Capacitive multi-touch screen, 800 x 480 resolution, 16:9 aspect ratio
- 1GHZ processor with 1 GB system memory
- 8GB onboard storage memory, up to 32GB additional memory via micro SD card slot
- Front facing webcam with microphone
- Built-in Wi-Fi
- Micro USB port
- Pre-loaded with Google™ applications including Google Play™, Gmail™, Google Maps™, YouTube™ and more…
- Up to 5 hours of battery life
- Weights 0.5 lbs; 4.75" x 7.55" x 0.375" dimensions

What's in the Box:

- HKC tablet
- instruction manual
- in ear headphones
- AC charger
- micro USB cable

Switch on/Unlock:

Switch On and unlock: when the device is in the OFF mode, press and hold “Power” key for 3 seconds to enter the Android startup progress bar, it need about 100seconds enter to the system desktop, the LCD is under locked mode, please press and pull the icon to no glee point, then the LCD will unlock automatically.

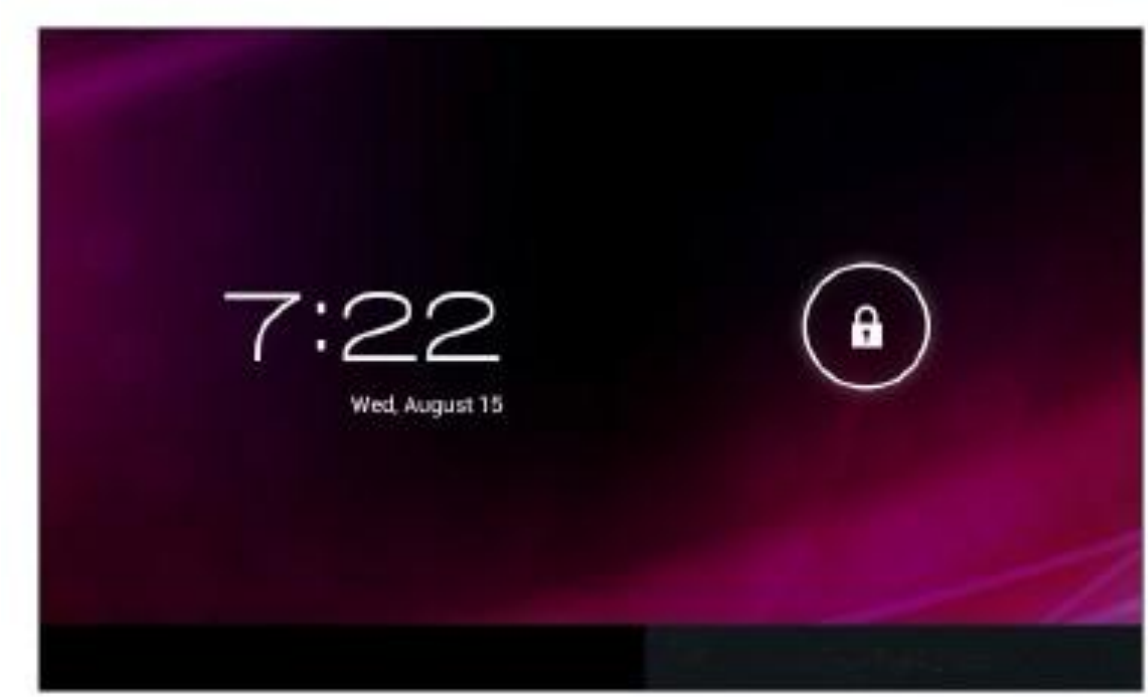

Power Save Modes/Lock screen/Switch OFF:

Press the “POWER” key shortly after starting up, system will enter to SLEEP power save and lock screen mode. Press the “POWER” key or tap the touch screen. For example: playing music, movie, etc.

Switch OFF: when the device is in the OFF mode, press and hold the “POWER” key for 3 seconds, the screen will display the power off interface, choose the power off option to confirm, the system will shut down automatically.

【**Note**】 When the device has low battery, it will alarm continuously and shut down automatically if the device is not being charged and the device cannot start up. Please check if the battery is low, and try it again after the battery is charged.

Battery Management and Charging:

Charge the battery for about 4-5 hours to make sure the battery is fully charged before the first time of use.

Insert the micro port of the battery adapter into DC slot on the device, and connect the other side with the power socket. Then the Power indicating lamp of the device will be in a high-lighted blue color, the desktop icon of the battery will keep rolling, which shows it is charging, please wait until the battery is fully charged, and do not disconnect the power while charging. Once the battery is fully charged, the indicating lamp will change into a dark blue color, the icon on the desktop will stop rolling. When the battery is exhausted completely, please charge at least one minute before starting up.

【**Note**】In order to keep the battery working in best condition, please pay attention as follows:

• Please do not charge the battery in high temperatures.

• Do not wait for the batter to be fully depleted before charging again. Keep the battery charged as needed.

• In order to keep the battery in the best condition make sure to charge once per two weeks if you do not use the device for a long time.

Operation of the Function Icons:

Function Icon Definitions:

Icon	Function Instruction	Icon	Function Instruction
	Back to Home menu		Note when the system finds new devices
	Show current power status		Menu for function block
	back		Wifi /Ethernet Connection status
	menu		Remain your last task

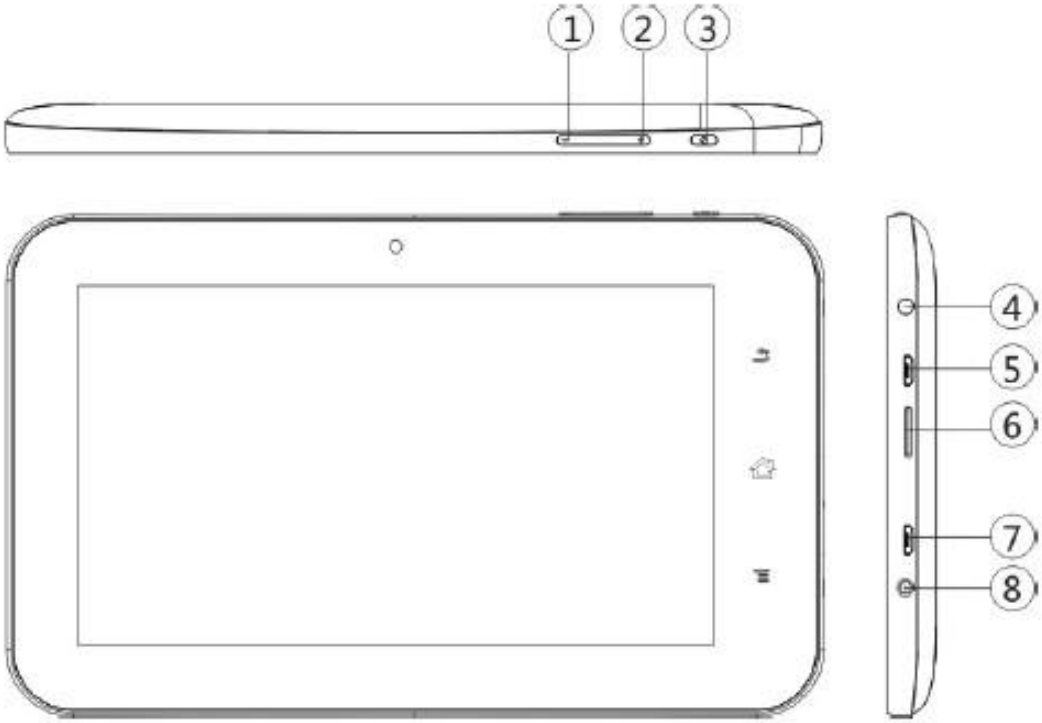

Symbol	Name	Description
1	Volume Key	Press Left to Vol -
2	Volume Key	Press Right to Vol+
3	POWER Key	Press the button shortly to enter sleeping/wake up mode, press for a few seconds to switch ON/OFF
4	Earphone Slot	Stereo earpiece Jack
5	USB Slot	MINI 5Pin USB Port, connect to a pc
6	TF card Slot	TF card slot (Micro SD Card Slot)
7	HOST Slot	HOST Slot to make USB Connection
8	DC Socket	Connect with 5V DC charger

Wireless and Networks:

WIFI

Turn on the Wi-Fi setting: tap the module icon to enter into the function menu list; press “setting” and enter into the setting interface; press “wireless and network” to setup, just select the Wi-Fi option as per below:

Set the Wi-Fi and connect to a network: press the “Wi-Fi setting to enter into the Wi-Fi options, the system will find the Wifi names available automatically. Please refer to the picture below, WIF networks available for use will be shown on the right:

You can see the network connection status when you press the network name. There will be a Wi-Fi icon “ ”. Showing the level of Signal

VPN Virtual Private Network:

You can create virtual private networks (VPN) and connect to your private network securely through a public network, such as the internet. You must set a lock screen PIN or password before you can use credential storage.

Add VPN network and follow the instructions on the screen.

USB Function:

Read USB-disk:

Insert the USB-disk into the Mini USB port and press the “explorer” option in the desktop, maybe you will need an additional adapter cable to connect between the USB and the device, press “USB” and enter into USB-disk. You may see the image below:

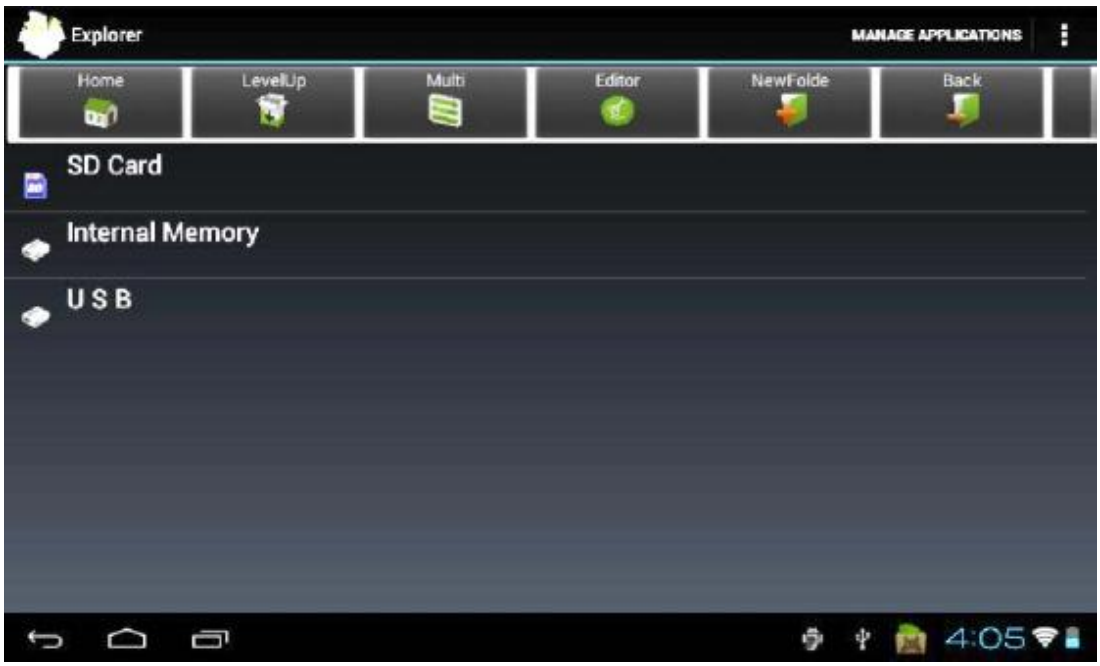

Camera Function:

You can use camera to take videos, pictures or for video conferencing functionalities.

Select the Camera Icon to use the functionality:

Desktop System:

(Multimedia Music/ Video/ Pictures/Record /E-book）

In the main menu or desktop, click the icon to play audio. When no music files are the audio play list, the system will automatically load the music files from the card to the audio player play list after turning on the audio player (the device supports the following audio file format: MP3, WAV, MIDI & WMA).

If two or more songs are in the music play list area, slide up/down on the touch screen to go page up/down.

Double-click favorites in the list to play music as shown in the following picture:

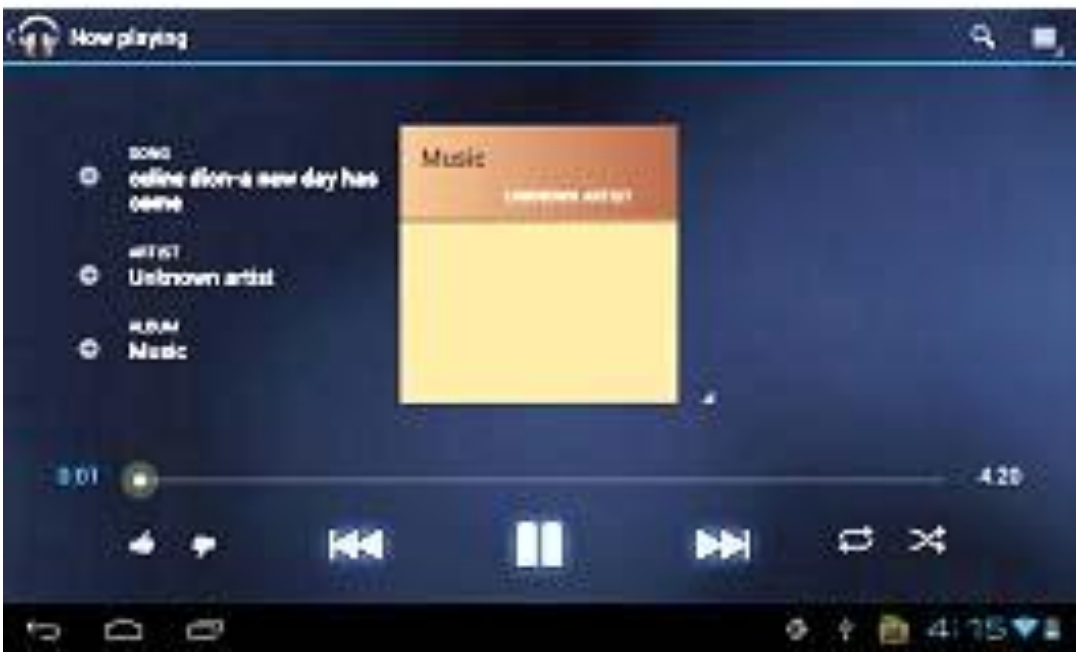

In the music playing interface, tap the “ “ button and then enter the audio playing list.

Drag the playback progress bar to adjust audio playback progress.

Note: audio player can play WAV recorded files/

Photos:

In the main menu or desktop, tap the picture browsing icon:

Photo Browser Button Descriptions:

Add Pictures (This device supports BMP, JPG, JPEG, PNG & GIF formats). Open the corresponding folder, find the image file and add the picture you want. Tap the photo setting button, and the photo can be set as your wallpaper:

Explorer

In the main menu or desktop, tap the explorer icon to enter the Management Interface, tap 【TF Card】then【Internal Memory】and【USB】to open. Their root directory folders to copy, paste, add, delete, remove and rename operation options, then tap previous / next folder or A menu to finish then copy, delete, paste, remove and rename to the correct directory.

To store additional files, you must insert a memory card. Your device accepts micro SD™ or micro SDHC™ memory cards with maximum capacities of 32 GB (depending on memory card manufacturer and type).

Desktop System (Network Applications)

IE Browser

When the WiFi connection is in normal (for details refer to the Wi-Fi Settings section), tap the main menu or desktop's IE browser icon to enter to the IE interface, click the address bar and input the website and click "Go" to enter a corresponding website.

Note: the IE explorer uses the popular third-party IE explorer software, please follow the IE explorer's standard operating mode to operate.

Email

When Wi-Fi connection is in normal (for details refer to the Wi-Fi Settings section), tap the mail icon in main menu or desktop to enter Email.

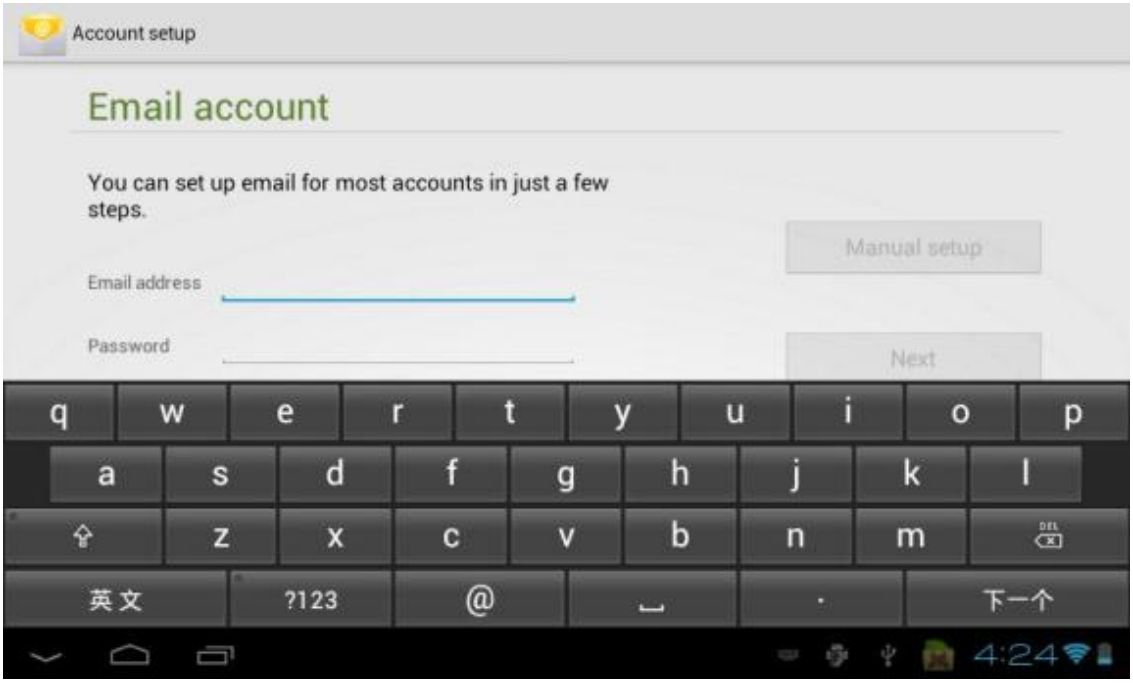
Account setup
Email account
You can set up email for most accounts in just a few steps.
Manual setup
Email address
Password
Next
q w e r t y u i o p
a s d f g h j k l
z x c v b n m
英文 ?123 @ 下一个
4:24

Desktop System (Other Functions)

Calculator:

Click the icon on the desktop to open the calculator

Voice and Display Settings:

Tap【Sound】to enter the settings interface:

Media Volume Settings：

Select 【media volume】to enter the settings interface, then to set up music and video volume…

Set operating sound (screen choosing) and SD card notifications as optional, tap and click ✔ till the display is highlighted.

Display Settings：

【**Orientation**】The display screen will change the direction automatically when rotating.

【**Brightness**】Drag to adjust the brightness, the tap “Ok” or “cancel” to save the changes.

【**Screen Timeout**】Select after how many seconds will you like for the screen to go into power saving mode.

Location and Security Settings:
Tap “Location and Security” to enter the setting interface:

Apps
Tap “Apps” to enter apps setting interface:

Running:

Tap “Running” to see and control the running service:

Language & input

Tap “language & input” to enter the settings interface:

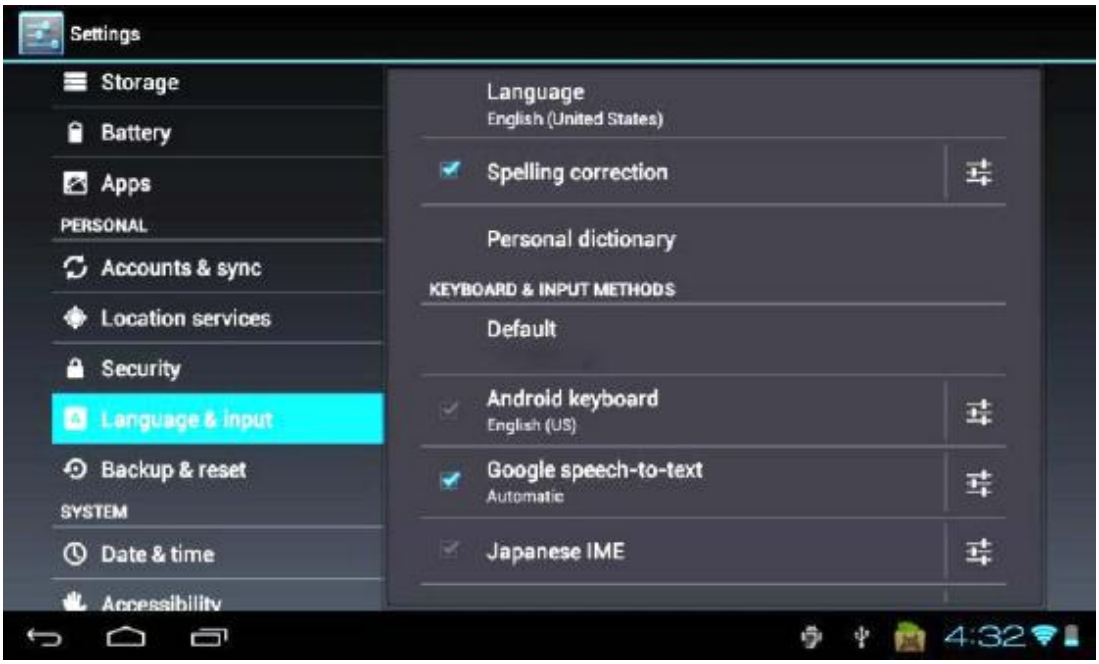

Language Setting：

The device support multi-languages, you can select the operation interface of different languages according to your needs. Select the matching language option, tap to confirm.

Time and Date Setting:

Select the Setting Menu “Date and Time” into setting interface, select the behind the Automatic option, to modify the Date, Time Zone and Time.

Date Setting:

Tap to select Day, Month Year, and tap the icon to confirm ok.

Time Zone Settings:

Select the time zone you locate and tap the screen to confirm.

Time Settings:

Tap to select hours, minutes, ex. 14:50, and tap the

icon to confirm ok.

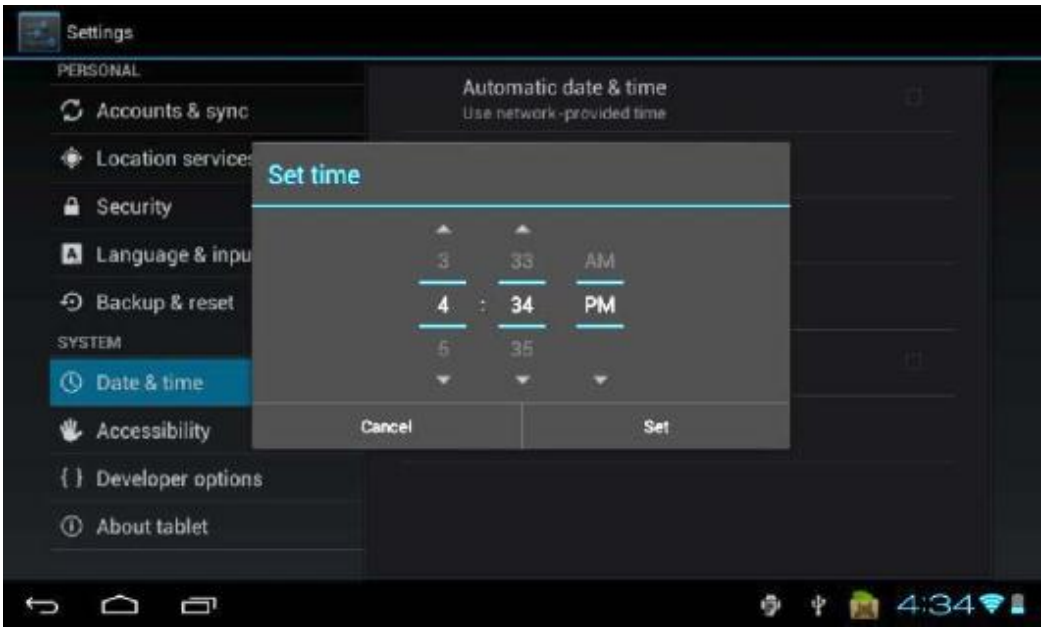

PC Connectivity:

Learn to connect your device to a PC with a USB cable in various USB connection modes. By connecting the device to a PC, you can transfer files or transfer data to and from your device directly.

About the device:

Check system information, legal information, device state software version, etc.

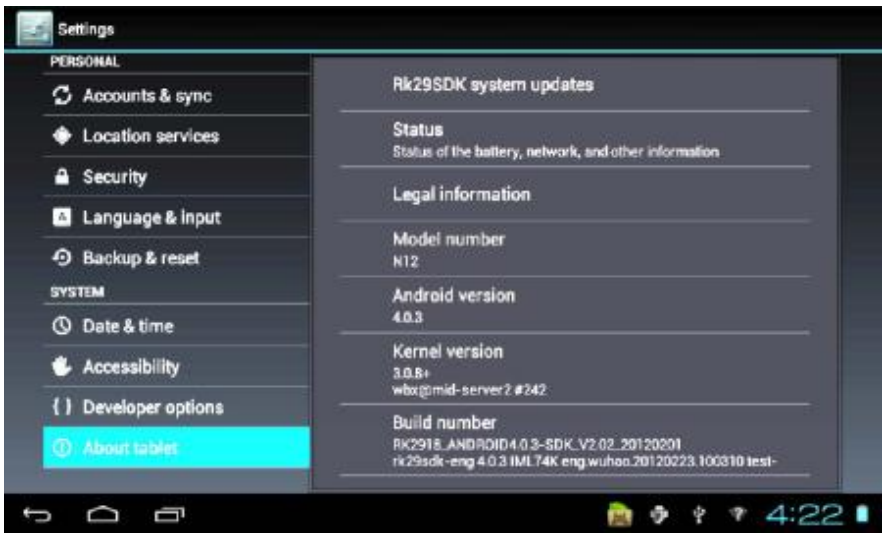

Desktop Function Icon Settings:

Add, Move or Delete Desktop Icon

Tap the icon at the main interface, into function menu list, display the entire application icon by pages. Press and drag the application icon to copy to current desktop i.e. set the shortcut on the desktop.

Press the application icon on the desktop for a few seconds to enter into the editing status mode and you can move the icon. When you drag the icon and hold for a few seconds, it will turn to the delete function, when you release the icon you can delete it.

How to update the software on your device:

Please visit www.HKCdigital.com and follow the direction on the site.

Please contact HKC customer service at 888-999-1683 for further assistance.

REGISTER YOUR TABLET

Keep your tablet up to date with the latest software updates, and be updated on what is new and upcoming for HKC. Please visit www.hkcdigital.com or mail the following info to HKC to register your tablet;

- Name
- E-mail
- Address
- Product Purchased
- Model Purchased
- Where was it Purchased
- Date Purchased
- Serial #
- Proof of Purchase

Mail to:

HKC Digital USA, INC. (attn: registration)

20957 Currier Road - Walnut, CA 91789

HKC Limited Warranty – Tablets

This HKC branded Product and delivered new in the original carton to the original purchaser is warranted by HKC against manufacturing defects in materials and workmanship for a limited warranty period of Ninety (90) Days for Labor and One (1) Year Hardware. However, there will only be a 90 day hardware and labor limited warranty for commercial use. HKC is not responsible for Software defects. Please refer to your Owner's Manual for Software Provider contact information.

This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in "as is" condition, "close outs", "liquidation and clearance sales", 'open box' products missing accessories, no fault found or damaged at time of delivery to HKC's authorized service center listed below.

Proof of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The
Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase, and is valid only on Products purchased through HKC authorized dealers and used in the United States, Canada, and Puerto Rico by the original purchaser. To receive warranty service, the purchaser must contact HKC for problem determination and service procedures. Warranty service may only be performed by HKC's authorized service center. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase.

HKC's service center listed below will repair your Product or if repairs cannot be made, HKC will replace this Product at no charge with the same or similar Product. If the Product is defective as specified in this limited warranty during the limited warranty period, HKC may use new or remanufactured hardware or products to repair or replace the Product with a similar Product at its sole discretion. All replaced hardware and Products become the property of HKC and must be returned to HKC. Replacement hardware and Products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight must be prepaid by original purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. HKC shall not be responsible for or obligated to replace damaged goods.

If the product is received damaged by HKC's service center, it is the responsibility of the consumer to file a claim against the carrier. HKC's service center will only store the damaged product for 30 days and reserves the right, in its sole discretion, to dispose of the damaged product or ship it back to the consumer at consumer's expense after 30 days.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this product, and shall not apply to the following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by HKC which damage this Product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. HKC does not warrant uninterrupted or error-free operation of the product.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON HKC. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. HKC SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTIBILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

To obtain warranty service, please contact LTI Computer, Inc. at: 888-999-1683